



ROOF ZONES FOR MINIMUM ONE FASTENER PER 4 SQUARE FEET
(1 FASTENER/0.372 SQUARE METER)


SPLIT LEVEL ROOFS

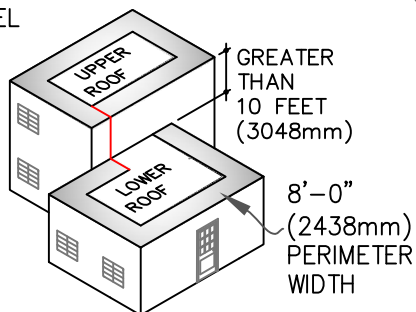



SPLIT LEVEL ROOFS

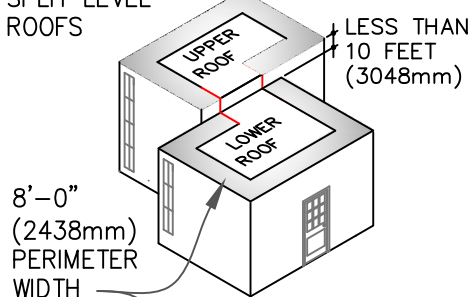


CANOPY ROOF

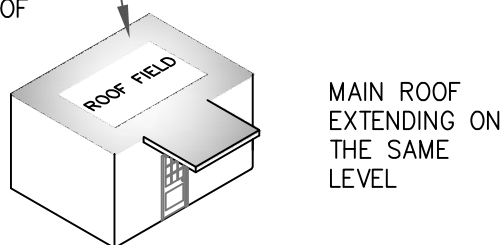

LARGE OPENINGS OR LOADING DOCKS

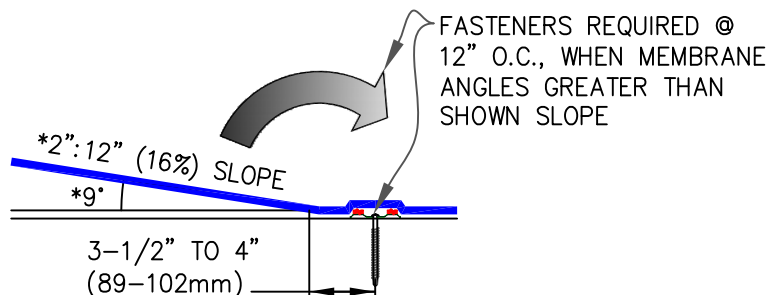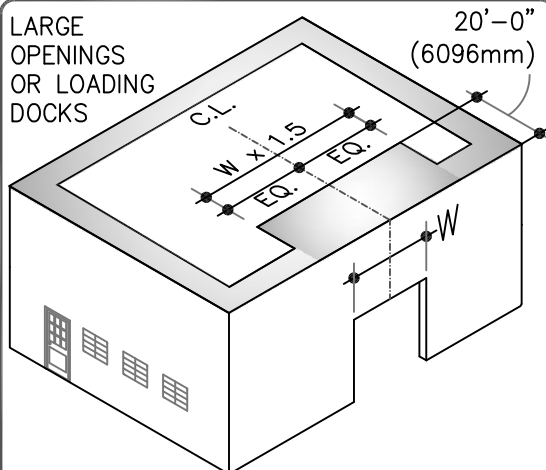

*100mm HORIZONTAL:16mm VERTICAL

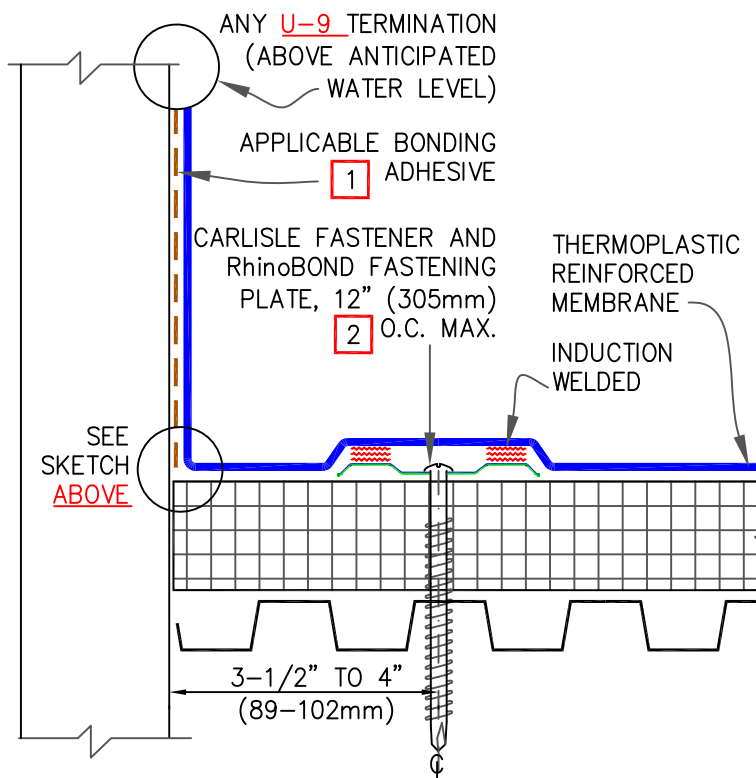

ANGLE CHANGE SECUREMENT

NOTES:

1. SURE-WELD MEMBRANE REQUIRES SURE-WELD BONDING ADHESIVE AND SURE-FLEX MEMBRANE REQUIRES SURE-FLEX BONDING ADHESIVE.
2. HP-X FASTENERS AND RhinoBOND PLATES ARE REQUIRED OVER STEEL AND WOOD DECKS.

— THERMOPLASTIC MEMBRANE
— APPROVED SUBSTRATE
0 — SEE NOTE(S)

ANGLE CHANGE SECUREMENT METHOD WITH RhinoBond PLATES

For additional information, refer to Specifications



DETAIL NO.

RB-2

RhinoBond